 


USER MANUAL

MODEL: BM-156


Parents Unit:

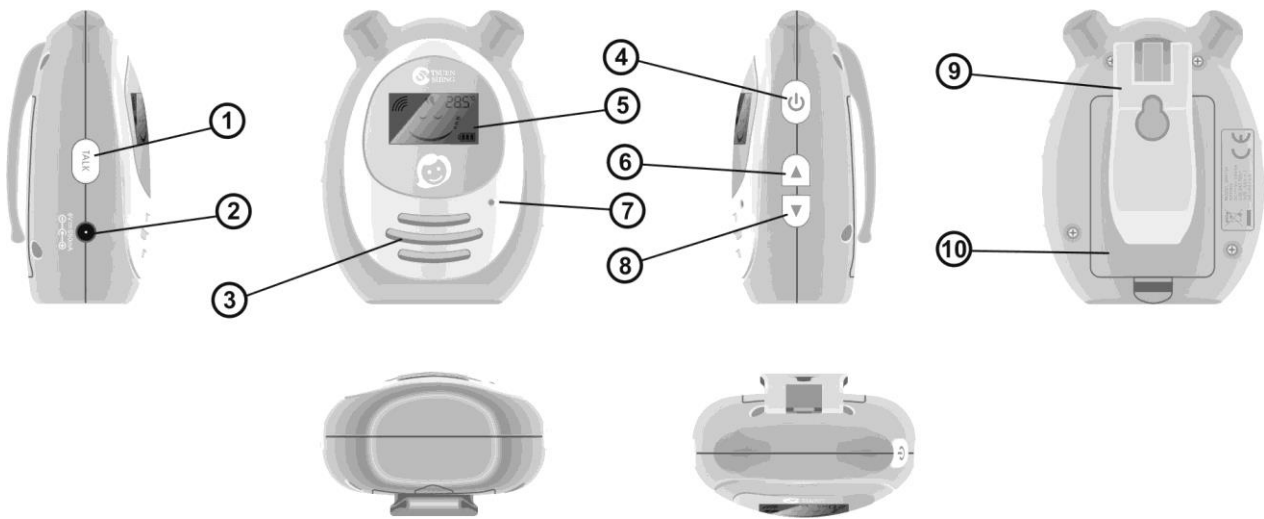

A. Name

- | | | | |
|---------------|-----------------------|--------------|--------------------|
| ①—TALK Key | ②—Power Supply Socket | ③—Speaker | ④—POWER ON/OFF Key |
| ⑤—LCD Display | ⑥—Volume “+” Key | ⑦—Microphone | ⑧—Volume “-”key |
| ⑨—Belt Clip | ⑩—Battery Compartment | | |

 B. LCD Display

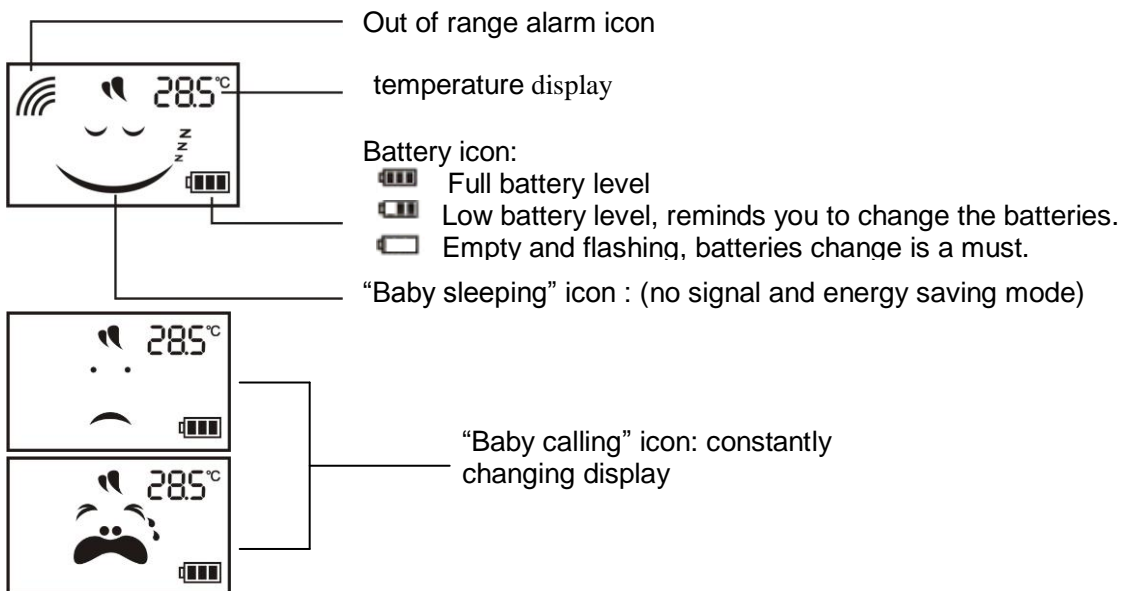

C. Operations Procedure

1、 Power ON/OFF

1. 1 Insert 3 AAA batteries or connect the Parents unit with the AC adaptor. [The unit will be turned on automatically.](#)
1. 2 Power on by pressing 2 seconds POWER ON/OFF Key “①”.
1. 3 LCD was full displayed,5 seconds for the backlight.
1. 4 Power off by pressing 2 seconds POWER ON/OFF Key “①” until no display on LCD.

2、 Volume Adjustment

 
2. 1 Press the key “▲” on the right side for increasing volume level;
2. 2 Press the key “▼” on the right side for decreasing volume level.

3、Talk to Baby unit(Only for parents unit)

3. 1 Talk key is located at the left side of the parents unit.
3. 2 Press TALK key to talk to the Baby unit.
3. 3 Hold TALK key to talk to continue talking.

4、Low Battery Indicator

4. 1 When the unit is in low battery, the power indicator should will be flashing which means the battery is low.
4. 2 At the same time, with “BI, BI” alert sound will be heard.

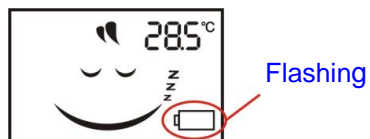


5、Battery Charging

5. 1 Insert 3 AAA rechargeable batteries.
5. 2 Use only the AC adaptors and plug into any nearby standard household electrical outlet.




6、Out of range alert (Only for Parents unit)

 6. 1 The parents unit will give out alert with “BI, BI” alert sound will be heard under such circumstances.
6. 1. 1 The units are detected out of communication range.
6. 1. 2 One of the parents and baby unit is in low battery or turned off.

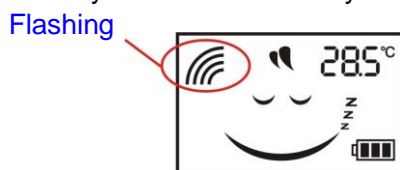


Baby Unit

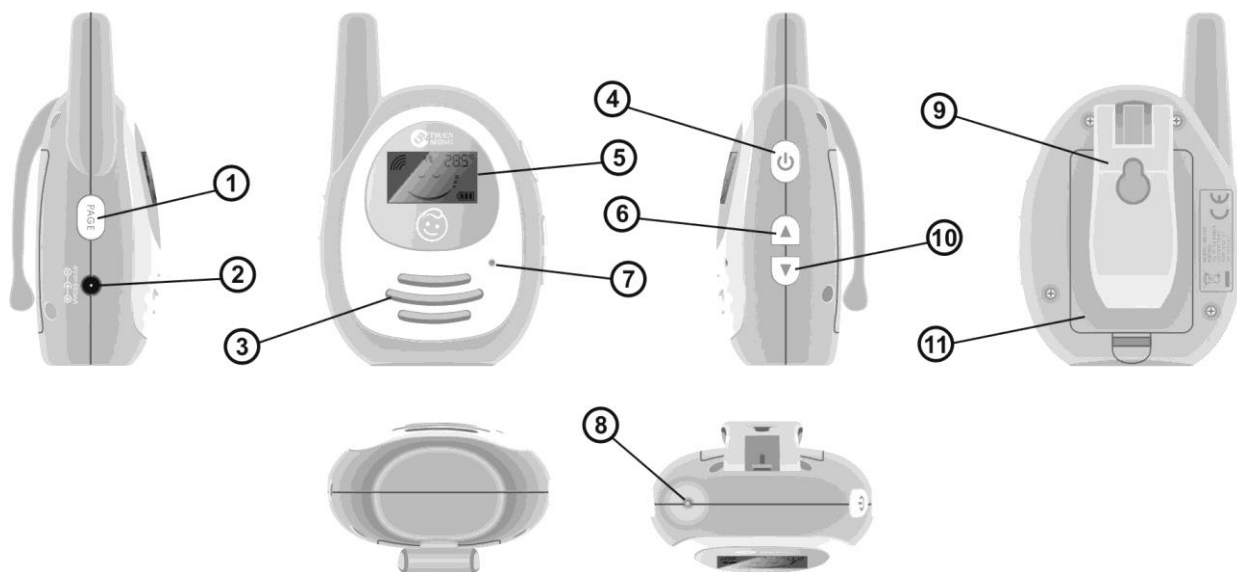 

A: Name

- | | | | |
|---------------|-----------------------|-----------------------|---------------------------|
| ①—Page Key | ②—Power Supply Socket | ③—Speaker | ④—POWER ON/OFF Key |
| ⑤—LCD Display | ⑥—Volume “+” Key | ⑦—Microphone | ⑧—Temperature measurement |
| ⑨—Belt Clip | ⑩—Volume “-”key | ⑪—Battery Compartment | |

 B: LCD Display

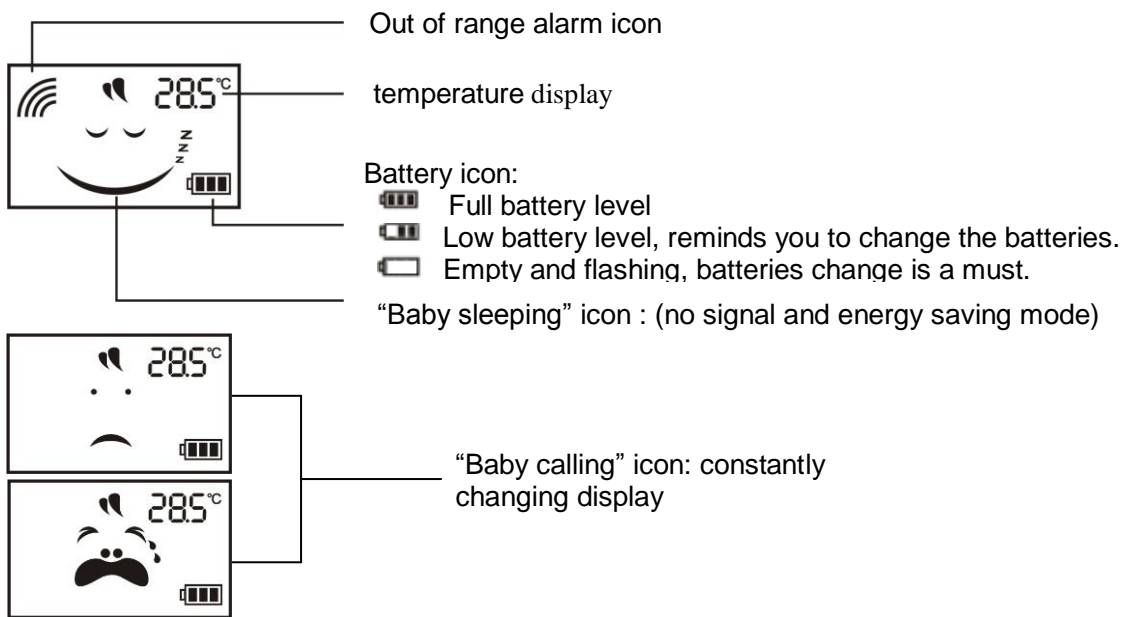

C. Operations Procedure

1. Power ON/OFF

1. 1 Insert 3 AAA batteries or connect the Baby unit with the AC adaptor. The unit will be turned on automatically.
1. 2 Power on by pressing 2 seconds POWER ON/OFF Key “**I**”.
1. 3 LCD was full displayed, 5 seconds for the backlight.
1. 4 Power off by pressing 2 seconds POWER ON/OFF Key “**I**” until no display on LCD..

2. Volume Adjustment

2. 1 Press the key “▲” on the right side for increasing volume level;
2. 2 Press the key “▼” on the right side for decreasing volume level.

3. Baby Room temperature display

 
3. 1 The temperature displayed after 30-60 seconds when powering on; Meanwhile it can be transmitted to parent unit.
3. 2 The temperature is influenced by the outer environment and will be changed accordingly.

4. Page function

4. 1 Press PAGE key to call the PARENT unit
4. 2 The parent unit will give out “BI, BI” sound 3 times (BiBi..BiBi..BiBi) .
4. 3 After 3 times, no sound will be heard unless pressing PAGE Key again.

5. Low Battery Indicator

5. 1 When the unit is in low battery, the power indicator should will be flashing which means the battery is low.
5. 2 At the same time, with “BI, BI” alert sound will be heard.

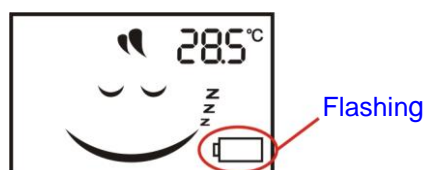

6、 Battery Charging

6. 1 Insert 3 AAA rechargeable [batteries](#).
6. 2 Use only the AC adaptors and plug into any nearby standard household electrical outlet.



7、 Out of range alert.(Only for Baby unit)

7. 1 The parents unit will give out alert with “BI, BI” [alert](#) sound will be heard under such circumstances.
7. 1. 1 The units are detected out of communication range.
7. 1. 2 One of the [parent](#) and baby unit is in low battery or turned off.



NOTE: [Code Pairing](#): Turn off both unit first and Turn them on again, pressing the volume key “▼” and POWER OFF key “①” 2 seconds [at the same time](#) (press the volume key “▼” first and then press POWER OFF key “①”), the below icon will appear; The same operation on another unit, one “BI” sound will be heard after successful code [pairing](#).



Technical Specifications

Power Supply Voltage:

Transmitter – 3 AAA rechargeable batteries / alkaline batteries
& adaptor : AC 100V – 240V- DC 6V

Receiver – 3 AAA rechargeable batteries / alkaline batteries
& adaptor : AC 100V – 240V- DC 6V

Operation Frequency: 2.401-2.482 GHz

Operating Range: up to 300 metre in ideal conditions

[Set contents](#): 1 baby unit, 1 parent unit, 3 AAA rechargeable batteries, 2 adaptors.